The Remote control

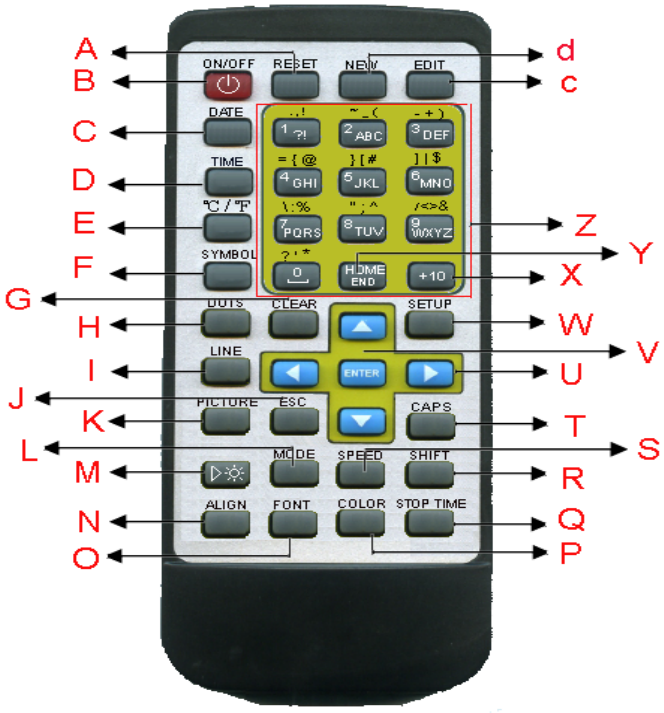

	Press	Description
c	EDIT	Enter into edit mode
d	NEW	New text
A	RESET	Return to disply mode
B	ON/OFF	Turn the sign on or off.
C	DATE	Insert date.
D	TIME	Insert time.
E	°c/°F	Insert temperature
F	SYMBOL	Insert symbol
G	CLEAR	Delete character.
H	DOTS	Insert pictures you have created.
I	LINE	start a new line.
J	ESC	Return to f ather menu.
K	PICTURE	Insert custom PICTURE

L	MODE	change display mode,
M	brightness	change display brightness
N	ALIGN	change align mode.
O	FONT	Select character FONT.
P	COLOR	Select the required color.
Q	STOP TIME	change stop time mode.
R	SHIFT	Switch between characters and interpunction
S	SPEED	change speed mode.
T	CAPS	Select either upper or lowercase.
U	and	move Cursor
V	ENTER	Enter menu.
W	SETUP	Change system parameters such as Time , width,, and so on.

Example 1--Creating text

Step	Follow as below:	The sign show as below:
1	Press **NEW**.	
2	Press ENTER.	

Example 1--Editing text

Step	Follow as below:	The sign show as below:
1	Press **EDIT**.	
	Press or to choice subject text.	
2	Press ENTER.	
3	You can press **0-9** to input character just like editing message in mobile telephone. For example, you enter “EU LED”. If you want to move the cursor, press or ; **Note:** You can also press the **HOME/END** to switch cursor position between the front and the end of the line**.** If you want to delete a character, move the cursor just to the right of it, then press CLEAR; If your want to add a blank, then press **SPACE**; If you want to start a new line, press **LINE**; If you want to switch between upper and lowercase, press **CAPS**; If you want to enter an alternative character on a key, press **SHIFT**.	
4	Press ENTER	
5	Press or to select display mode like align , Speed , and stop time.	
6	Press ENTER go to disply or Press ESC to exit editing, Or RESET to display mode	

Example 2--Setting the font and color

1	Press **EDIT**.	
3	Press  or to choice subject text.	
2	Press ENTER.	
4	Press **COLOR** and/or **FONT** several times to select the required one.	
5	Press ENTER	
6	Press or  to select text parameter , Speed , and stop time.	
7	Press ENTER go to disply mode or Press ESC to exit editing,Or RESET to display mode	

There are 23 fonts currently available; the table below shows the availability of fonts in different sized signs.

Font	Description	Sign Size
SS7	Seven dots in Height-Normal	One, two, three, or four-line signs
ST7	Seven dots in Height-Shade	One, two, three, or four-line signs
WD7	Seven dots in Height-Wide	One, two, three, or four-line signs
WS7	Seven dots in Height-Wide+Shade	One, two, three, or four-line signs
SDS	Seven dots in Height-Color+Shade	One, two, three, or four-line signs
SRF	Seven dots in Height-Normal	One, two, three, or four-line signs
STF	Seven dots in Height-Shade	One, two, three, or four-line signs
WDF	Seven dots in Height-Wide	One, two, three, or four-line signs

WSF	Seven dots in Height-Wide+Shade	One, two, three, or four-line signs
SDF	Seven dots in Height-Color+Shade	One, two, three, or four-line signs
SS10	Ten dots in Height-Normal	Two, three, or four-line signs
ST10	Ten dots in Height-Shade	Two, three, or four-line signs
WD10	Ten dots in Height-Wide	Two, three, or four-line signs
WS10	Ten dots in Height- Wide +Shade	Two, three, or four-line signs
SS15	Fifteen dots in Height-Normal	Two, three, or four-line signs
ST15	Fifteen dots in Height-Shade	Two, three, or four-line signs
WD15	Fifteen dots in Height-Wide	Two, three, or four-line signs
WS15	Fifteen dots in Height-Wide+Shade	Two, three, or four-line signs
SML	Seven dots in Height	One, two, three, or four-line signs
SS5	Five dots in Height-Normal	One, two, three, or four-line signs
ST5	Five dots in Height-Shade	One, two, three, or four-line signs
WD5	Five dots in Height-Wide	One, two, three, or four-line signs
WS5	Five dots in Height-Wide+Shade	One, two, three, or four-line signs

Example 5-Inserting predefined pictures

Step	Follow as below:	The sign show as below:
1	Press **EDIT**.	
3	Press  or to choice subject text.	
2	Press ENTER.	
4	Press **PICTURE** once to **insert** symbol.	

5	Press or to select the required symbol.	
6	Press ENTER.	
6	Press **ENTER**	

Example 6--Inserting time and date

Step	Follow as below:	The sign show as below:
1	Press **EDIT**.	
3	Press or to choice , subject text	
2	Press ENTER.	
1	Press Date.	
2	Press or to select the required format.	
6	Press ENTER.	
6	Press **ENTER**	

Example 7--Setting the time and date

Step	Follow as below:	The sign show as below:
1	Press **SETUP**. .	
2	Press several times to choose **Clock Setup.**	
3	Press ENTER.	
4	Press to choose **H&M&S.**	

5	Press ENTER then press or  and  or to set time. For example, set “T: 16:26:22”.	
6	Press . ENTER	
7	Press **RESET**	

Example 8--selecting diplay No.

Step	Follow as below:	The sign show as below:
1	On deiplay mode Press +10 to choose text numbers digit. Switch between one ,two and three digit.	
2	Press 1-9 or Press or to choice subject text.	
3	Press ENTER just playing one text which having choicd. of course you can Press RESET to playing all text.	

Note:

Example 8--Setting message moving speed

Step	Follow as below:	The sign show as below:
1	Press **SPEED**.	
2	Press or  to select the required speeed mode.	
3	Press ENTER	

NOTE:-Setting message pause time and align mode jist like Setting message moving speed.

Example 11-- Deleting text

Step	Follow as below:	The sign show as below:

1	On deiplay mode Press +10 to choose text numbers digit. Switch between one ,two and three digit.	
2	Press 1-9 or Press  or to choice subject text.	
3	Press ENTER	
1	Press CLEAR	
2	Press ENTER. Dellete text,or PressESC cancel operation.	

Example 12--Deleting all text

Step	Follow as below:	The sign show as below:
1	Press **SETUP**. .	
2	Press  or to choose **Del all text?**	
3	Press ENTER.	
7	Press **RESET** .	